

Front Mount Exterior (FME) Transponder

Front Mounting Instructions for trucks and buses



The FME transponder is recommended for trucks, buses, coaches, RVs, and other classes of large commercial vehicles. FME transponders programmed for License Plate mount on the front of the vehicle only.


Requirements

- For reliable operation of the transponder, the vehicle must be equipped with only one correctly mounted transponder while passing through a toll facility. Other transponders present in or on the vehicle must be switched off or enclosed in an RF shield.
- FME transponders must be mounted in the location for which they were programmed. FME transponders programmed for License Plate must be mounted on the front of the vehicle. FME transponders programmed for Rooftop must be mounted on the roof of the vehicle.
- The mounting location must provide direct line-of-sight communication between the transponder and the toll facility's overhead antenna.
- FME transponders cannot be used where local regulations prohibit externally mounting transponders on the front license plate, front bumper, or other external surfaces.
- The presence of certain classes of front impact-absorbing materials used in the construction of the vehicle may affect the operation of the FME transponder. The mounting location must be free of such materials.
- Apply the 3M™ VHB™ acrylic foam tape that is on the back of the mounting plate in accordance with 3M™ document 70-0704-8701-5.

FME Front Mounting Instructions


Select a mounting location either on the front license plate using the license plate mounting screws or on the front of the vehicle using the mounting plate. Consider the following criteria:

- A: a minimum of 24 in. clearance if bumper or large object extends 7+ in. (A_1).
- B: a minimum of 15 in. from the top of the transponder to the roadway for front bumper mounting.
- C: the transponder must be mounted within 4 in. of the vehicle center.

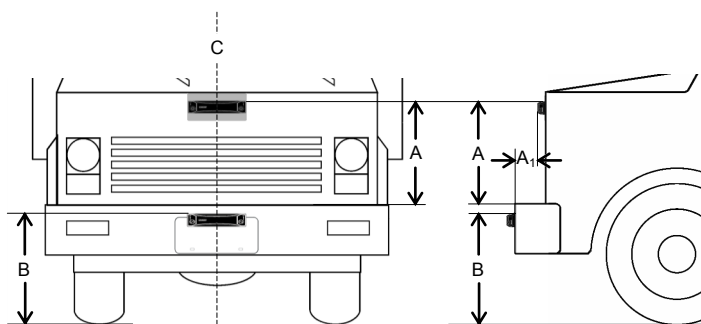

If mounting the transponder on the front license plate:

1. Remove the two upper license plate mounting screws securing the license plate to the front of the vehicle.
2. Using the license plate mounting screws removed in step 1, secure the transponder, with orientation arrows pointing skyward, and the license plate to the front of the vehicle.

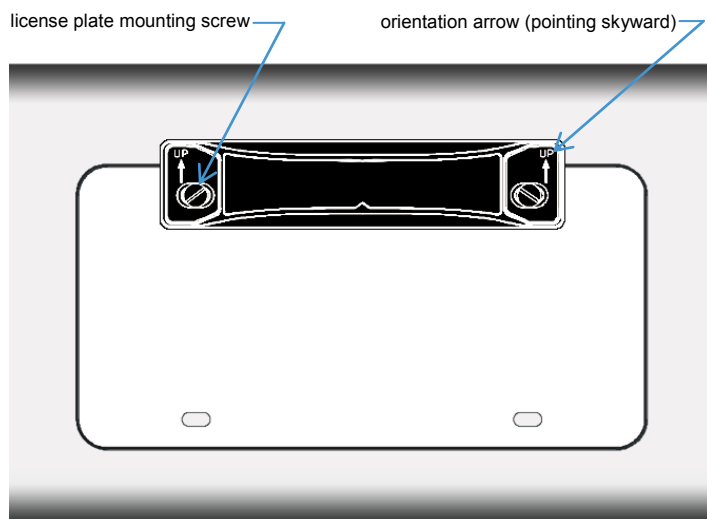


FME Mounted on License Plate

If mounting the transponder elsewhere on the front of the vehicle:

1. The back of the mounting plate is covered with 3M™ VHB™ acrylic foam tape. Prepare the mounting location in accordance with 3M™ document 70-0704-8701-5.

NOTE: Ensure the mounting plate is installed on the vehicle so that when the transponder is installed on the mounting plate, the orientation arrows on the transponder point skyward.

2. Remove the protective paper from the adhesive on the back of the mounting plate and firmly press the mounting plate against the mounting surface with either a roller or platen pressure, maintaining pressure for 15 seconds to ensure a good bond.
3. Using the supplied tamper-proof nuts, lock washers, and flat washers, secure the transponder to the mounting plate with the notches on the transponder and mounting plate aligned and with the orientation arrows on the transponder pointing skyward.

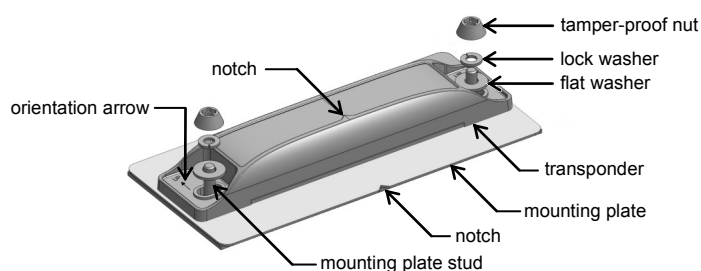

FME on mounting plate

REINVENTING THE ROAD®